




model AB44

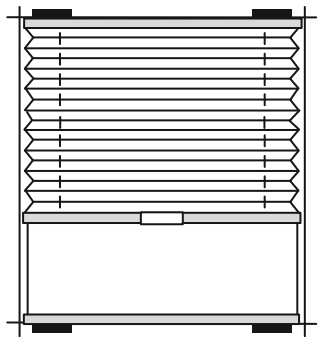


model DB11

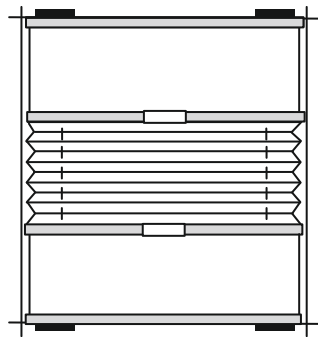


model DB21

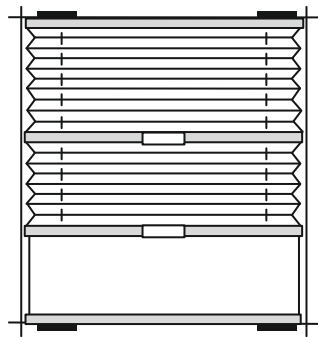


model DB26

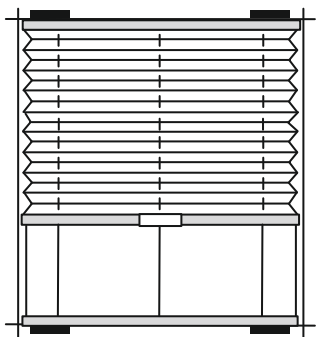


model PB11

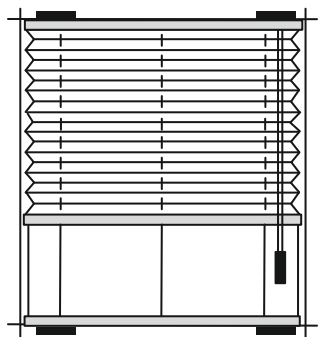

model PO20

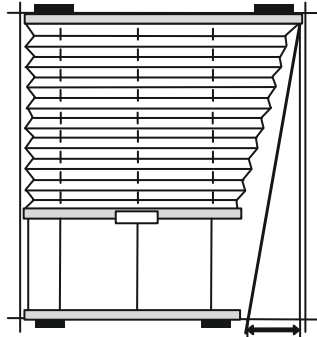


model PB43

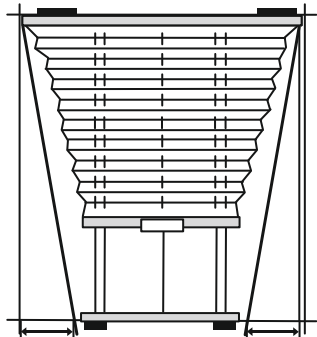


model PB44


AO 52

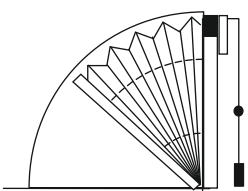


AO 53

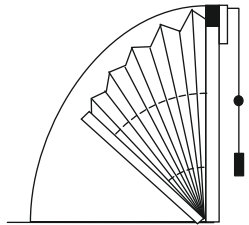


AB 54

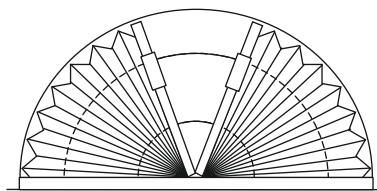


AB 55

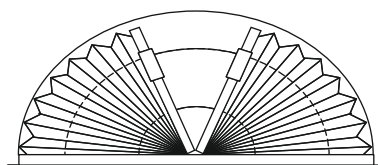


AB 50

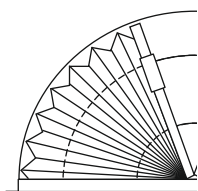


AB 51

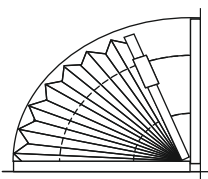


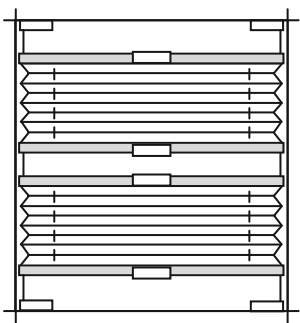


model AB28

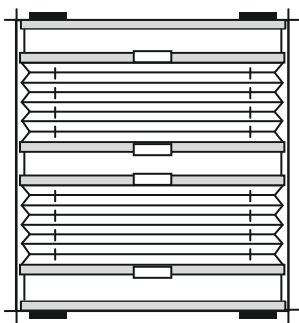


model AB29

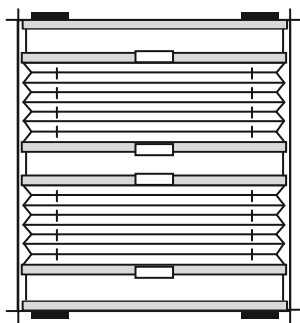


model DB29

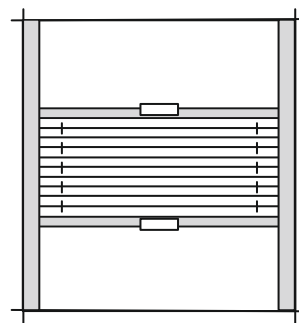


model DB22

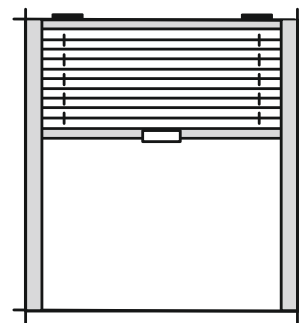


model DB23

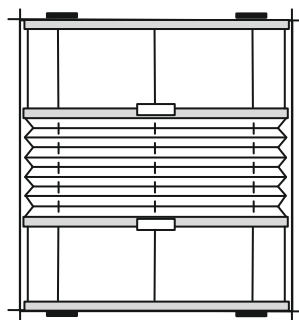


model PB21

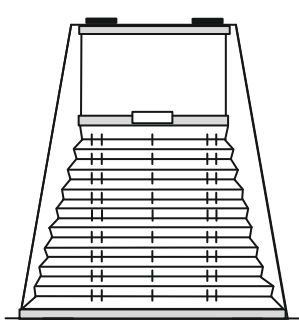


model AB46

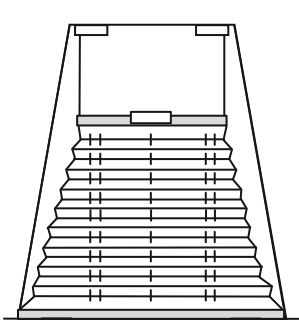


model AB47

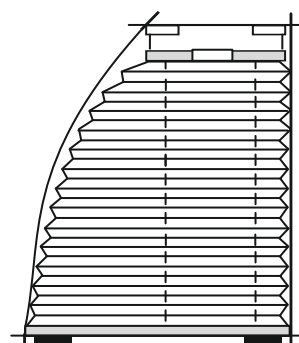


model AB58

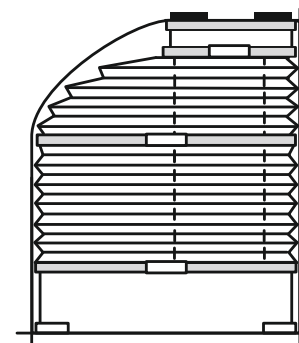


model AB57

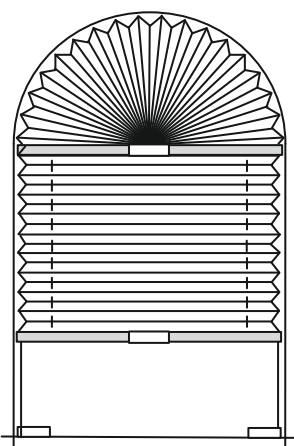


model AB60

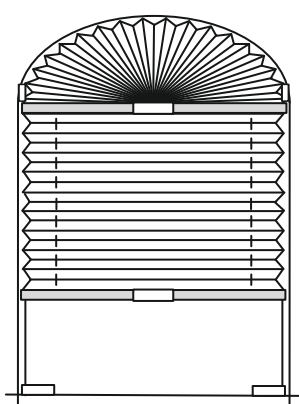


model AB61

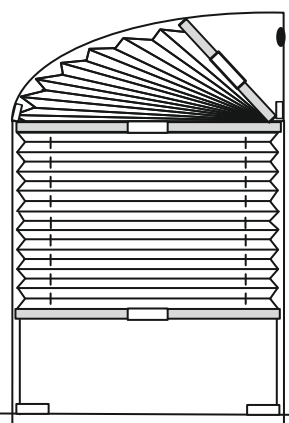


model AB51

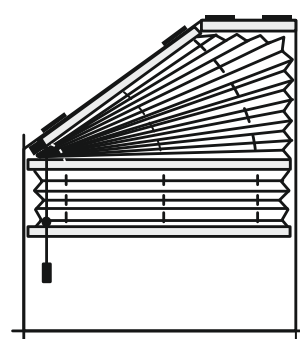


model AO48

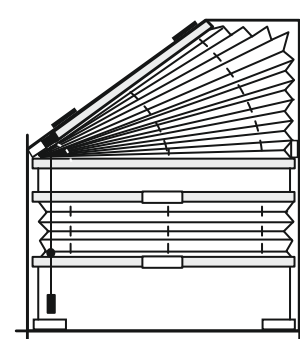


model AO49

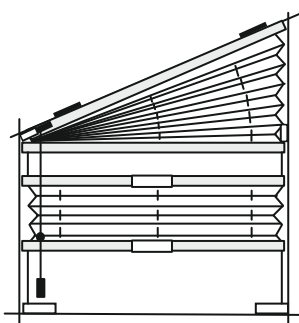


model AO45

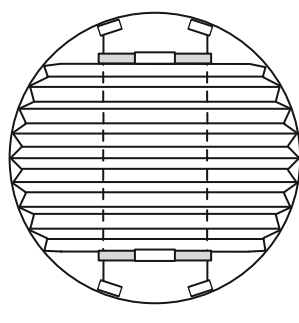


model AB62

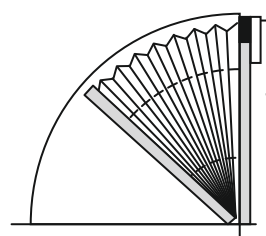


model AO52

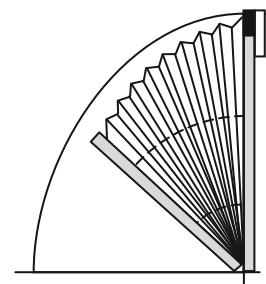


model AO53

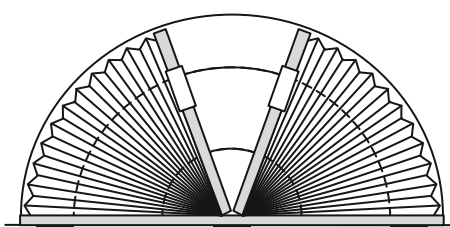


model AB54

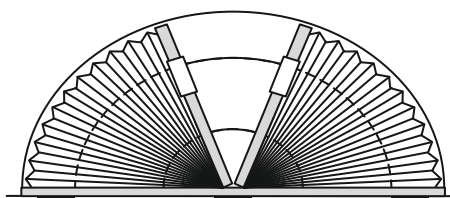

model AB55

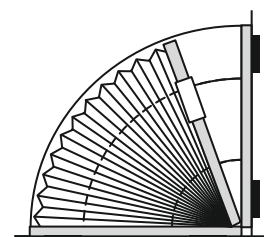

model AB50

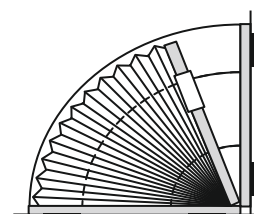

model AB51